

Fisher-Price®

P5452

SMART CYCLE[®] EXtreme

PHYSICAL LEARNING ARCADE SYSTEM



NOTICE ABOUT EPILEPSY AND SEIZURES

PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.

A very small portion of the population have a condition which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition. If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, **DISCONTINUE USE IMMEDIATELY** and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.

CONSUMER INFORMATION

- Please keep these instructions for future reference, as they contain important information.

 
GETTING STARTED



- Insert the game cartridge into the socket in the side of the cycle. Push to be sure it's fully inserted.
- Turn your TV or DVD/VCR power **ON**.
- Slide the power switch on the cycle to **ON I**.
- To find the picture on your TV screen, set your TV's or DVD/VCR's mode selector to INPUT or VIDEO IN.

Note: You can use this Smart Cycle® software with any Smart Cycle® model. The Rumble Action feature is only available with the Smart Cycle® Extreme model.

CYCLE CONTROLS

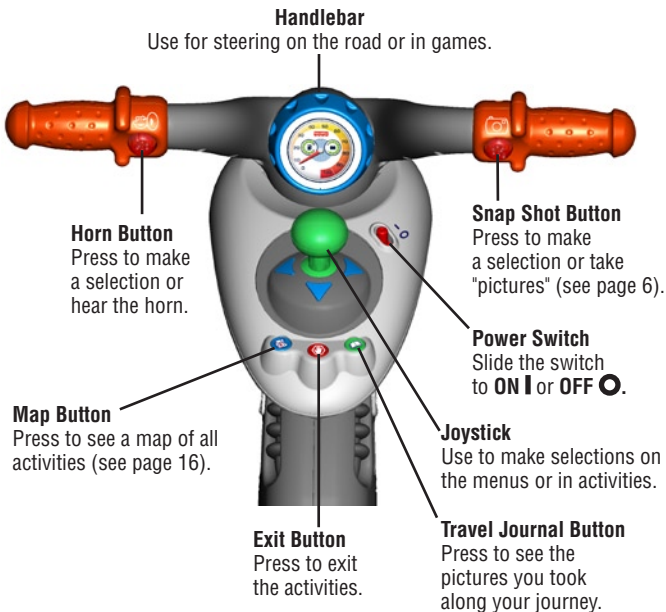



CHOOSE A RIDE



Customize your vehicle!

 
- Use the joystick to scroll through vehicle choices. Press a red handlebar button to make your selection.
- Repeat this process to choose the horn sound for your vehicle.



- Use the joystick to choose to turn the rumble feature on or off.
- Press either handlebar button to make your selection.




BACK TO THE ROAD

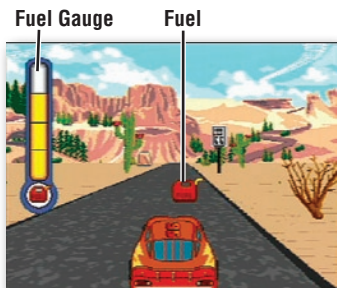


Fill your tank.

 - Pedal the cycle to move down the road. *The faster you pedal the faster you go!* Use the handlebars to steer.
- Collect cans of fuel on the road to fill your gas tank. Simply drive into them.
- Watch the fuel gauge on the screen to see how much fuel you have left. Don't run out of fuel!

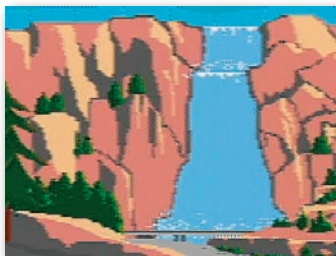

Taking snap shots.

- Press the right handlebar button  to take snap shots (only in this activity).



 
RAMONE'S COLOR MIXER



Off ramps


- Keep traveling down the road or head onto an off-ramp for other fun games and activities. Simply bear to the side of the road as you see one approaching.

Hint: If you miss your ramp, you can pedal in reverse to back up.

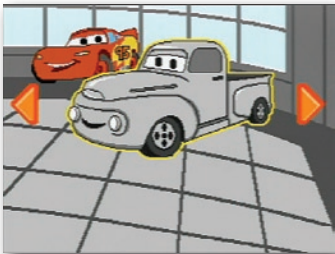


Paint the cars with a custom color!

 - Use the joystick to scroll through the vehicle choices. Press a red handlebar button to make your selection.

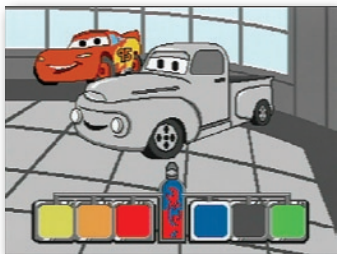

 - Use the joystick to scroll through the color choices. Press a red handlebar button to make your selection.
- Repeat this process to choose another color.
- Look at the new color you have made!

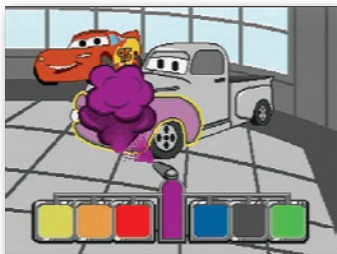


- First use the joystick to choose a section of the car to paint.
- Then, press a red handlebar button to spray paint the car.
- Repeat this process until you paint the entire car!



- Use the joystick to scroll through decorations for your car. Press a red handlebar button to make your selection
- When you're finished with this activity, press the exit button (red hand icon) to return to the road. Pedal to the next activity.



 TIP TRACTORS

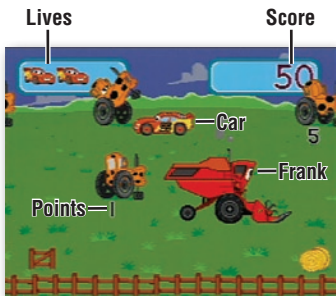


Tip over tractors in the field!

- Use the joystick to move your car around the field.
- Drive into the tractors to tip them over. Score points for every tractor you tip. Look at your score!
- Don't get run over by Frank or you'll lose a life. Press a red handlebar button to jump.
- Tip over as many tractors as you can and advance to the next level! Each level has more obstacles to avoid.
- When you're finished with this activity, press the exit button (red hand icon) to return to the road. Pedal to the next activity.



 THE BIG RACE

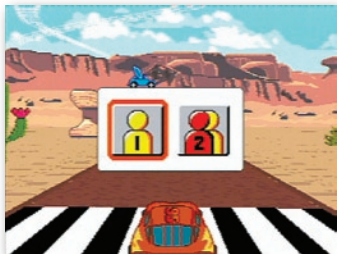

***Pedal as fast as you can
to the finish line!***

- Use the joystick to choose a *1 Player* or *2 Player* game. Press a red handlebar button to select the game.



1 Player

- Pedal down the road as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and *you win!*

Hint: Drive over the arrows along the way for a speed boost!

 


FISHIN'



2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for *Player 2* to beat your time.
- The player with the fastest time wins.
- When you're finished with this activity, press the exit button to return to the road. Pedal to the next activity.

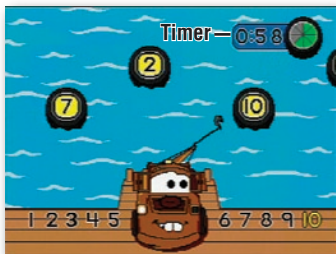

Go fishing for tires with Mater!

- Listen for the number on the tire that you need to catch.
- Use the handlebar to steer Mater's line towards the tire.
- Press a red handlebar button to catch the tire. Catch all the tires before time runs out.

Level 1 - Catch only the tires that match the number given.

Level 2 - Catch only tires with a number greater than the number given.

Level 3 - Catch only tires with a number less than the number given.

- When you're finished with this activity, press the exit button to return to the road. Pedal to the next activity.




THE GRANDSTANDS



 
Find the missing car!

- Listen to the number sequence of the cars in the grand stand.
- Find the missing number as the cars drive by.

- Use the joystick to find the missing car. Press a red handlebar button to select it.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



BONUS ACTIVITY

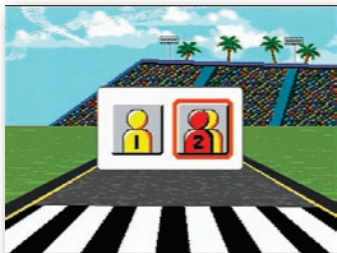

Let's go to the Piston Cup!

- Use the joystick to choose *1 Player* or *2 Player* game. Press a red handlebar button to select the game.



1 Player


- Pedal down the road as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and you win!



- Make a quick pit stop, so you don't fall behind in the race.
- Press the red handlebar button to fix your flat tire or refuel your car!



2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for Player 2 to beat your time.
- The player with the fastest time wins!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




TRAVEL JOURNAL



 

See previous
snap shot

See next
snap shot

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snap shot.





Stamp Tool Erase

- Next, use the joystick and handlebar buttons to select the stamp tool  to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snap shot.
- Select the erase button  to clear the screen and decorate another picture.



 THE MAP

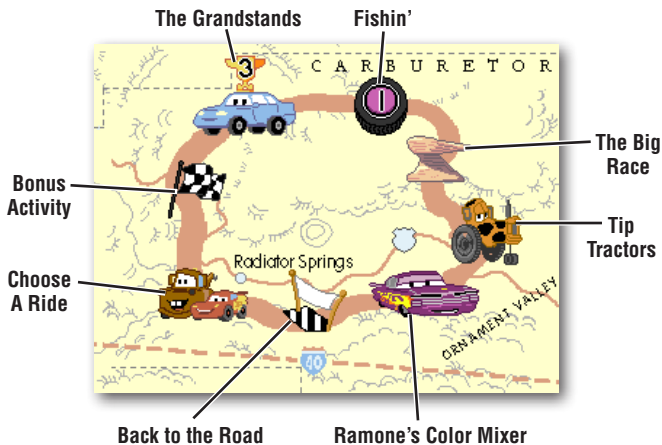

- You can travel down the road and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION
VISIT US ON LINE AT
WWW.SERVICE.FISHER-PRICE.COM

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2009 Mattel, Inc.
All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

Stretch your mind with other software titles for your Smart Cycle®!

Each sold separately and subject to availability.



© 2009 Viacom International Inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc. Created by Stephen Hillenburg.

Stephen Hillenburg

www.bobthebuilder.com © 2009 HIT Entertainment Limited and Keith Chapman. All Rights Reserved. The Bob the Builder name and character, related characters and riveted logo are trademarks of HIT Entertainment Limited. Reg. U.S. & Tm. Off. and other countries.

©2009 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.



©2009 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

HOT WHEELS and associated trademarks and trade dress are owned by, and used under license from Mattel, Inc. © 2009 Mattel, Inc. All Rights Reserved.

Disney • Pixar elements © Disney • Pixar Hudson Hornet™, Mercury™, Chevrolet Impala™

PRINTED IN CHINA

www.fisher-price.com

P5452pr-0920